

PowerWave™ Certification Module

PowerWave MT Minitower 120/132/150



Table of Contents

PowerWave™ MT Specifications

Specifications for the PowerWave MT 120/132/150	Page 2
MLB Diagram	Page 5

CUDA Reset

For Your Safety	Page 3
Purpose of CUDA Reset.....	Page 4

Bezel Removal/Installation

Removing and installing the chassis cover.....	Page 6
Removing and installing the front bezel.....	Page 8

Board Removal/Installation Procedures

Removing and installing RAM	Page 10
Removing and installing CPU card.....	Page 12
Removing and installing L2 cache	Page 14
Removing and installing PCI expansion cards.....	Page 15
Removing and installing PCI Riser card.....	Page 18

Drive Removal/Installation Procedures

Removing and installing drives in the rear 3.5-inch drive bay.....	Page 20
Removing and installing drives in the 5.25-inch drive bay.....	Page 22
Removing and installing the floppy disk drive	22

System Level Removal/Installation Procedures

Removing and installing the MLB.....	Page 26
Removing and installing the power supply	Page 28

PowerWave MT Specifications

CPU	PowerPC 604 at 120, 132 or 150MHz
Main Logic Board	Tsunami (Comparable to a Macintosh 9500)
CPU Upgrade	Available via daughtercard replacement
MacOS	7.5.2, 7.5.3, 7.5.5, 7.6, 7.6.1, 8.0
Memory	8 DIMM slots—168-pin, 64 bit, 60 ns (1.24 Gb max); Memory interleaving supported
Cache	512Kb Level 2
SCSI	SCSI: Internal—10MB/sec data transfer rate; External—5 MB/sec data transfer rate
Serial Ports	High speed GeoPort-compatible 9-pin modem and printer ports
Network	Built-in Ethernet AAUI port; Built-in Ethernet 10 Base-T port; LocalTalk serial connection via modem or printer port
Bus Expansion	Three PCI expansion slots
Floppy Drive	One 3.5-inch, 1.4MB floppy disk drive. Supports MacOS, Windows, DOS, OS/2 and ProDOS disk formats.
Video	No internal video. Ships standard with a high quality, accelerated video card with both Mac and SVGA connections
Audio	16 bit, 44.1 KHz Stereo in/out connections (microphone port requires line-level input, such as Apple's Plaintalk Microphone); Built-in speaker
ROM	Removable Apple ROM
Case style	Minitower
Drive Bays	Three front accessible, full-height 5.25-inch drive bay
Dimensions	7"(W) X 15"(H) X 16"(D); 22 lb (10.5 kg)
Power Supply	200W, 100V-240V (Domestic/International manual switching)



For Your Safety

To ensure your personal safety as well as prevent unnecessary damage to the computer, please follow all safety precautions when performing any service on Power Computing computers.

Note: Always make sure that the computer is powered down before attempting any service. To make sure that the computer is completely powered down, check the light behind the power button on the front bezel and make sure that it is off.

Preventing ESD (Electrostatic Discharge) - There are two means by which a technician can maintain a ground and eliminate ESD:

- wear an ESD wrist strap that is grounded to the computer
- power down the computer, but leave the CPU power cord plugged into the wall socket; touch the metal case of the power supply to ensure complete static discharge before service.

Do not wear loose clothing or jewelry that may become caught in the components inside of the computer case.

Make sure that the work environment is free from excessive moisture. Any moisture on the components of the computer may cause damage.

If you need further assistance, please call:

1-800-708-6227



CUDA Reset

The CUDA Reset button is a small red button located on the Main Logic Board. Depressing this button resets the CUDA Microcontroller Chip. This chip is responsible for the following functions:

- Turns system power on and off
- Manages system resets from various commands
- Maintains parameter RAM
- Manages the Apple Desktop Bus (ADB)
- Manages the real-time clock
- Lets an external signal from either Apple GeoPort serial port control system power

It is rarely necessary to reset CUDA, but many problems that appear to be hardware related can be fixed by doing so. Resetting CUDA will not harm the machine in any way. Some of the most common reasons to reset CUDA are:

- After adding RAM, the machine will not boot, RAM does not show up in the memory control panel, etc.
- Machine will not power up
- Machine powers up, but does not chime or boot
- A serial port remains inaccessible even after booting without extensions, resetting parameter RAM, etc.
- Machine will power down for no apparent reason
- After adding any hardware to the inside of the machine


Resetting CUDA

1. Shut down the computer and disconnect all external devices, but leave the power cable plugged in to ground the computer.
2. Remove the cover (refer to ***Chassis Cover Removal/Installation*** on page 6).
3. Touch the metal chassis of the machine. This will dissipate static electricity into ground.
4. Locate the CUDA Reset button (refer to ***MLB Diagram*** on page 5).
5. Press the CUDA Reset button for a few seconds.
6. Reboot, and verify resolution of the problem you wanted to solve.

Note: Resetting the CUDA will cause some system settings to default to factory settings.



MLB Diagram

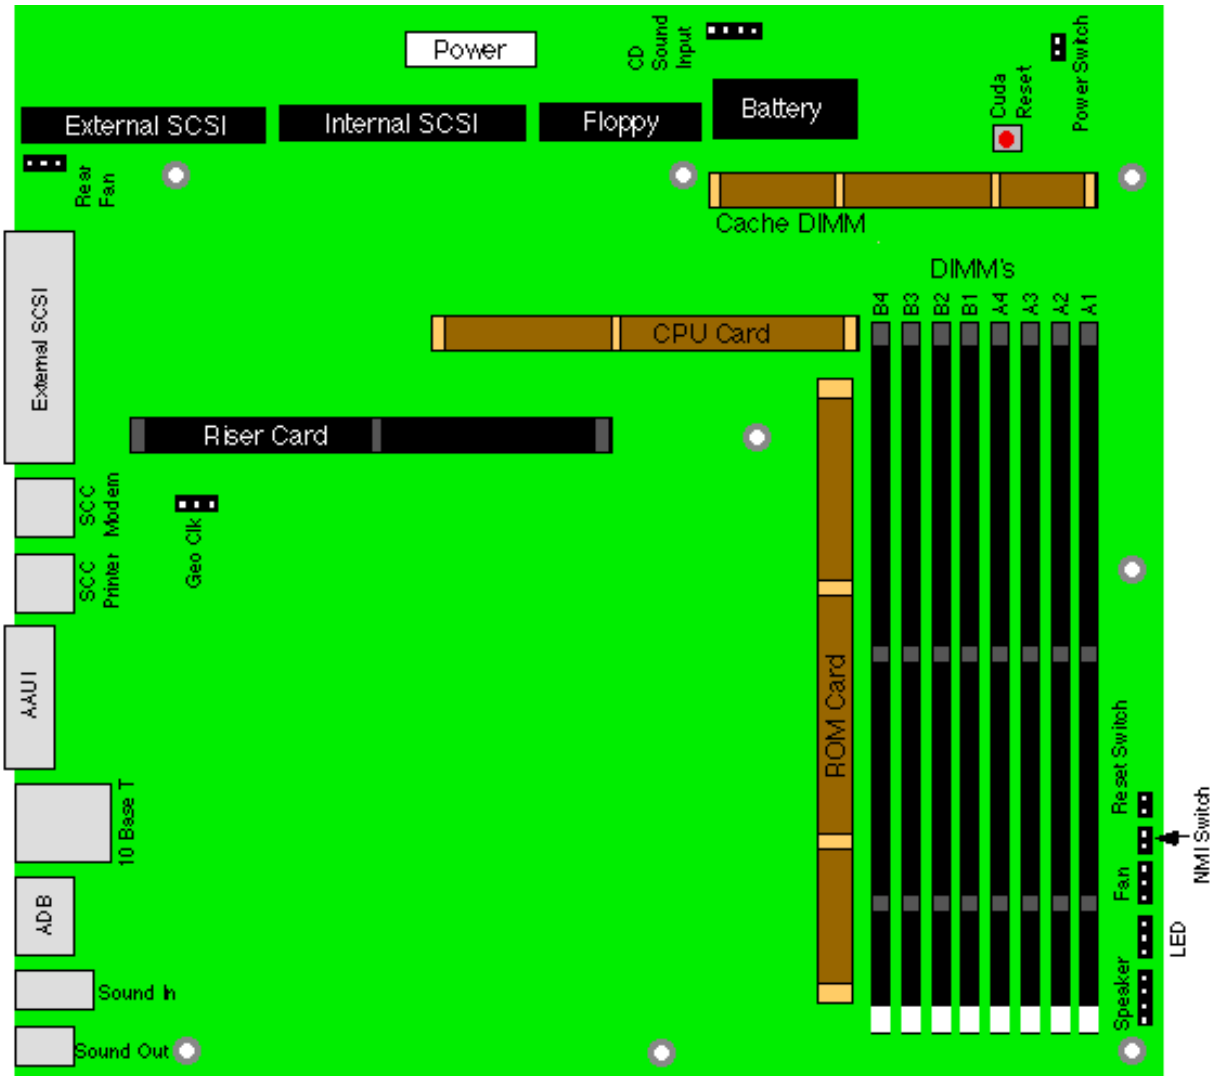



Chassis Cover Removal/Installation

Removing the Chassis Cover

1. Shut down the computer and turn off all external devices. If you do not have a grounding strap, leave the computer plugged into the wall socket. Leaving the computer plugged in ensures a positive ground. Disconnect everything but the power cord.
2. Remove the large thumb screw from the rear of the computer (see **Figure 1: Removing the** on page 6).
3. Gently pull the levers on the bottom corners of the cover outward. Slide the cover straight back toward the rear of the machine, lift it off and set it aside.

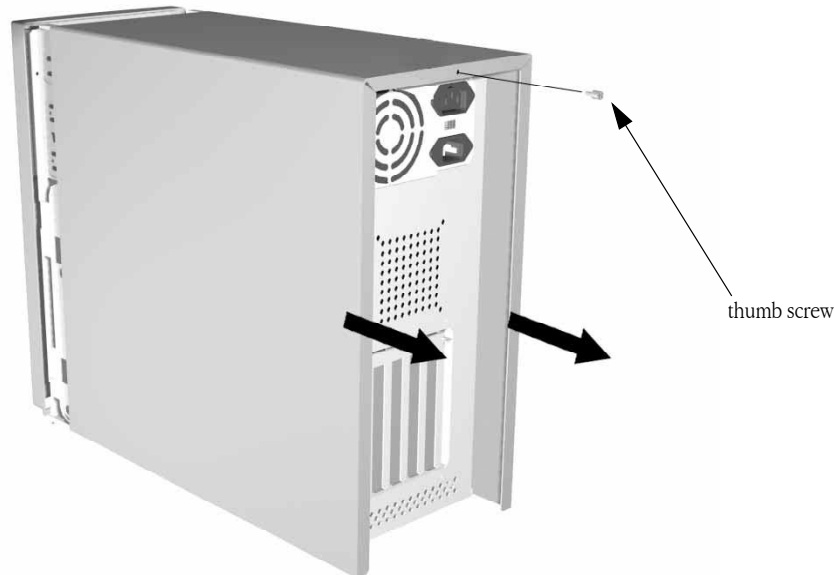


Figure 1: Removing the chassis cover

Installing the Chassis Cover

1. Standing at the front of the machine, slide the cover forward until the levers on the back corners lock into place. Make sure the tabs on the front of the cover go under the bezel.

2. Screw the thumb screw into the rear of the chassis.
3. Reconnect the cables to the machine.




Front Bezel Removal/Installation

Removing the Front Bezel Cover

1. Remove the chassis cover (refer to *Chassis Cover Removal/Installation* on page 6).
2. Disengage the top three tabs that secure the bezel to the front of the computer (see *Figure 2: Disengage Bezel Tabs* on page 9). All of these tabs must be disengaged before the front bezel can be removed. The tabs are located on the inside of the chassis frame:
 - one is on the top left end of the chassis
 - one is on the top right end of the chassis
 - one is on the back of the chassis front panel, next to the power switch assembly
3. Disengage the bottom two tabs that secure the bezel to the front of the computer (see *Figure 2: Disengage Bezel Tabs* on page 9). Both of these tabs must be disengaged before the front bezel can be removed. The tabs are located on the inside of the chassis frame:
 - one is on the inside left end of the chassis
 - one is on the inside right end of the chassis
4. Lay the bezel face down directly in front of the chassis.
5. Disengage the wiring between the chassis and the front bezel.

Figure 2: Disengage Bezel Tabs

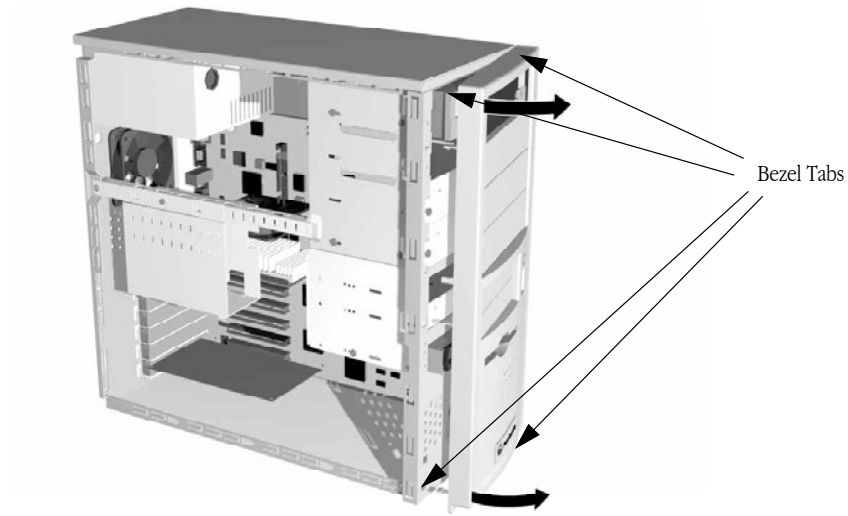

Installing the Front Bezel

1. Connect the necessary wires to their respective ports on the main logic board.
2. Line up the two tabs on the bottom with the chassis and push them in until they click. Lift the top edge of the bezel and line up the tabs with the chassis. Press the top edge of the front bezel until the tabs click into place.
3. Replace the chassis cover (refer to *Chassis Cover Removal/Installation* on page 6).



RAM Removal/Installation

Note: All DIMMs must be 168-pin, fast-paged mode, 70-nanosecond RAM access time or faster. The PowerWave has eight DIMM slots near the front on the motherboard. The PowerWave supports memory interleaving. For faster performance, install DIMMs in pairs (slot A1 and B1, etc).

Removing RAM

1. Remove the chassis cover (refer to *Chassis Cover Removal/Installation* on page 6).
2. Lay the computer on its side, open side up.
3. Locate the DIMM(s) you would like to remove (see *Figure 3:* on page 10). Loosen the desired DIMM module by reaching in and pushing down on the small lever at the end of the DIMM slot. (see *Figure 4: Removing RAM* on page 10). The DIMM should pop loose from the slot at the lever end.

Figure 3:
DIMM slot
location

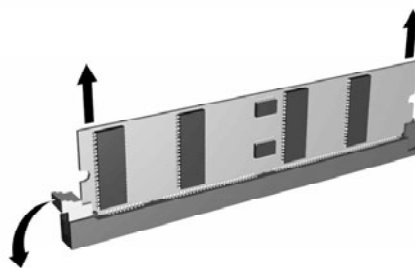
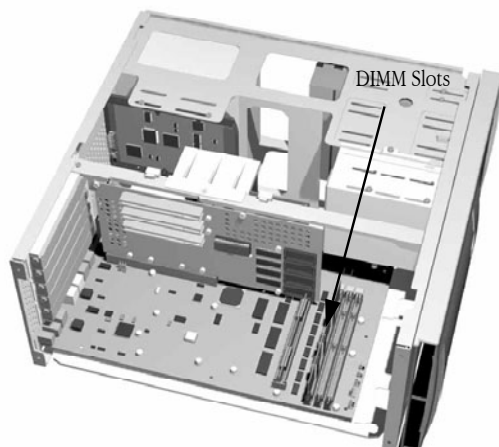


Figure 4: Removing RAM

4. Grasp the DIMM module on each end and evenly pull the module up and out of the slot.

Installing RAM

1. Hold the module (with the contacts down) with one hand at each end. Notice that there are two notches in the contact edge of the DIMM module.

2. Lower the DIMM squarely into the slot so that the notches in the DIMM line up with the notches in the slot. Slide the contacts straight into the slot and make sure the contacts are firmly seated. (see **Figure 5: Installing RAM** on page 11). When properly seated, the contacts on the bottom should not be visible.

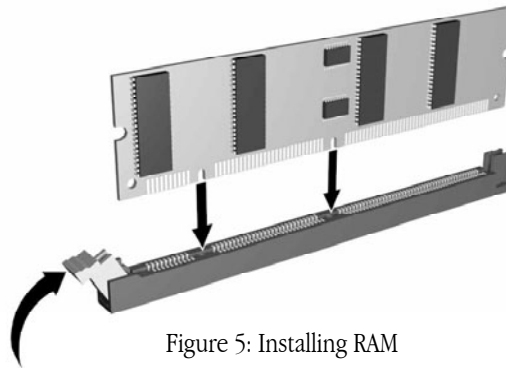


Figure 5: Installing RAM

Note: Don't force the DIMM module into the slot; if the MLB starts bending significantly, pull the DIMM out, reposition it, and try again. If the DIMM module is seated correctly, the lever at the end of the DIMM slot should be completely raised.

3. Reset the CUDA (refer to **CUDA Reset** on page 4).
4. Replace the chassis cover (refer to **Chassis Cover Removal/Installation** on page 6).



CPU Removal/Installation

Removing the CPU

1. Remove the chassis cover (refer to **Chassis Cover Removal/Installation** on page 6).
1. Lay the machine on its side, open side up.
2. Remove the hex-head screw that secures the support beam to the rear of the chassis.
3. Swing the rear end of beam slightly up and out of chassis. Pull the beam towards rear of machine to remove.
4. Place both hands on either side of the CPU card and lift up. Sometimes a gentle rocking motion from end to end (**not side to side**) will make it easier to remove the CPU card.

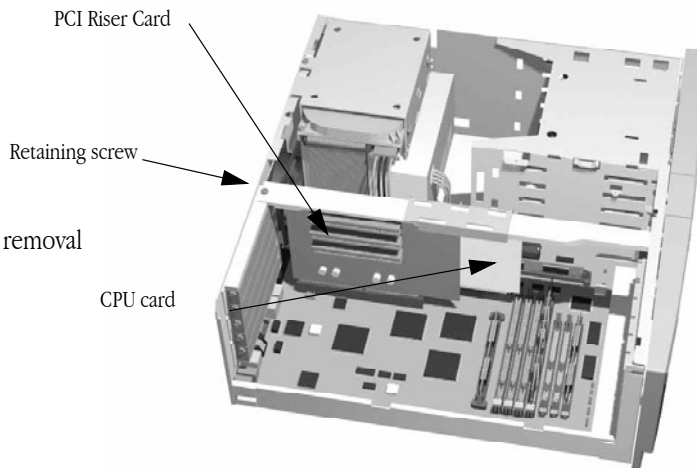


Figure 9: CPU removal

Installing the CPU

1. Hold the CPU card (contacts facing down) with one hand at each end. Notice that there is a notch in

the contact edge of the CPU card.

2. Lower the CPU card squarely into the slot so that the notch in the CPU card lines up with the notch in the slot. Slide the contacts straight into the slot and make sure the contacts are firmly seated. (see **Figure 9: CPU removal** on page 12). When properly seated, the contacts on the bottom should not be visible.

Note: Don't force the CPU card into the slot; if the MLB starts bending significantly, pull the CPU card out, reposition it, and try again.

3. Reset the CUDA (refer to **CUDA Reset** on page 4).
4. Replace the support beam. First, fit the forward end of the stabilizer bar into the two small cut-outs in the front panel of the metal case. Then, swing the bar down, aligning it with the riser card and the processor card.
5. 5. Replace the chassis cover (refer to **Chassis Cover Removal/Installation** on page 6).



Cache Removal/Installation

Removing the Cache

1. Remove the chassis cover. (refer to *Chassis Cover Removal/Installation* on page 6).
2. Locate the cache card (refer to *MLB Diagram* on page 5).

Note: The level 2 cache is located between the CPU riser card and the front drive bay assembly. If you believe that the area is too small to adequately grasp the cache card, remove the CPU riser before removing the cache (refer to *CPU Removal/Installation* on page 12).

3. Place both hands on either side of the L2 cache card and lift up. Because the L2 cache is held in by a tight pressure fit, sometimes a gentle rocking motion from end to end (*not side to side*) will make it easier to remove the cache card.

Installing the Cache

1. Hold the L2 cache card (contacts facing down) with one hand at each end. Notice that there are notches in the contact edge of the L2 cache card.
2. Lower the L2 cache card squarely into the slot so that the notches in the L2 cache card line up with the notches in the slot. Slide the contacts straight into the slot and make sure the contacts are firmly seated. When properly seated, the contacts on the bottom should not be visible.

Note: Don't force the L2 cache card into the slot; if the MLB starts bending significantly, pull the L2 cache card out, reposition it, and try again.

4. Reset the CUDA (refer to *CUDA Reset* on page 4).
5. Replace the chassis cover (refer to *Chassis Cover Removal/Installation* on page 6).



PCI Cards Removal/Installation

Note: Before you install any expansion cards, be sure that the combined power consumption of the expansion cards does not exceed the limits of the computer. Refer to the documentation that came with the cards you are installing for their power consumption rating and to “Power requirements” in the *User's Guide* for the power consumption limit for this computer.


Removing PCI Cards

1. Remove the chassis cover (refer to *Chassis Cover Removal/Installation* on page 6).
2. Lay the computer on its side, open side up.
3. Remove the bottom panel of the chassis. Remove the two screws on the bottom panel's left side. Slide the bottom panel straight up to remove it.
4. Disconnect any cables that may be attached to the PCI card.
5. Remove the screw attaching the PCI card to the inside of the chassis.
6. Firmly grasp the PCI card and pull it straight out of the computer laterally. Be careful not to damage any components that may be protruding through the I/O slot. Sometimes a gentle rocking motion from end to end (*not side to side*) will make it easier to remove the PCI card.

Installing PCI Cards


1. Remove the chassis cover (refer to *Chassis Cover Removal/Installation* on page 6).
2. Lay the computer on its side, open side up.
3. Remove the bottom panel of the chassis. Remove the two screws on the bottom panel's left side. Slide the bottom panel straight up to remove it.
4. Remove the retaining screw of the metal I/O slot cover from the slot you wish to use. (see *Figure 10: Removing PCI slot cover* on page 16).
5. Pull the I/O slot cover out the side so that the tongue at the bottom of the cover slides out of the slot in the chassis.

Figure 10: Removing PCI slot cover

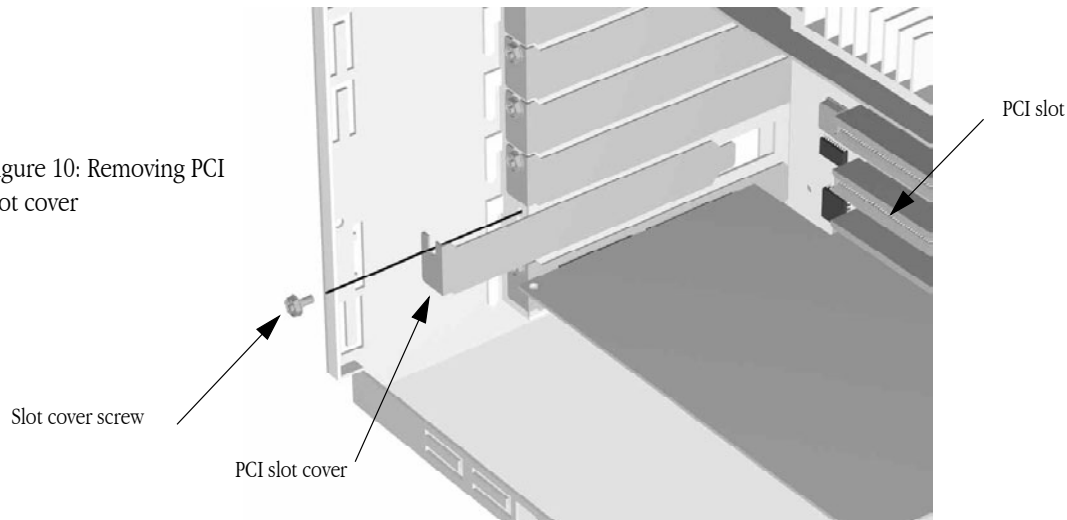

6. Hold the PCI card (contacts facing down) with one hand at each end. Notice that there is a notch in the contact edge of the PCI card.
7. Lower the PCI card squarely into the PCI riser card so that the notch in the PCI card lines up with the notch in the PCI riser card. Slide the contacts straight into the PCI riser card and make sure the contacts are firmly seated. (see **Figure 11: PCI card installation** on page 16). When properly seated, the contacts on the bottom should not be visible. Secure the PCI card to the chassis with the retaining screw.

Figure 11: PCI card installation

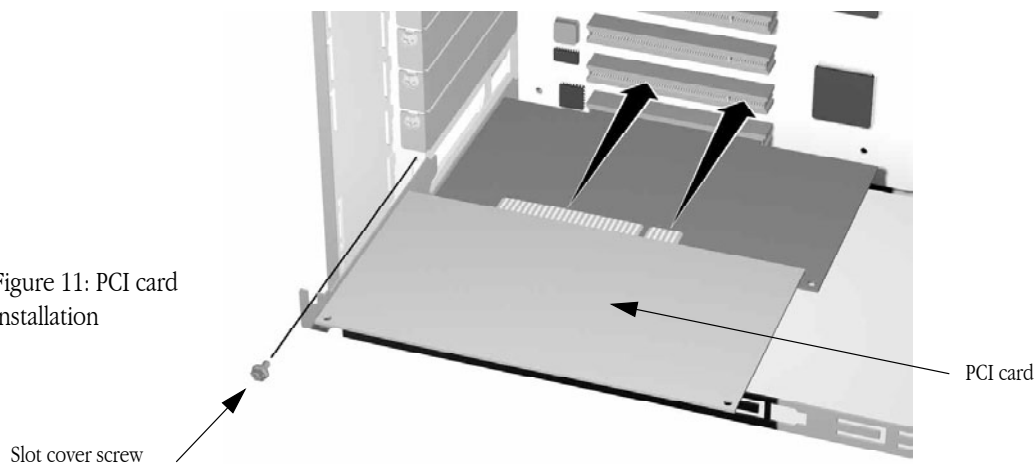

Note: Don't force the PCI card into the slot; if the PCI riser card starts bending significantly, pull the PCI card out, reposition it, and try again.

8. Connect any wires or cables to the PCI card necessary for its proper operation.
9. Reset the CUDA (refer to **CUDA Reset** on page 4).
10. Replace the bottom chassis panel. Align the chips on the panel's right side with the notches in the chassis. Slide the bottom panel into place and replace the screws on the panel's left side.
11. Replace the chassis cover (refer to **Chassis Cover Removal/Installation** on page 6).



PCI Riser Card Removal/Installation

Removing the PCI Riser Card

1. Remove the chassis cover (refer to *Chassis Cover Removal/Installation* on page 6).
2. Locate the riser card (refer to *MLB Diagram* on page 5).
3. Remove any installed PCI cards (refer to *PCI Cards Removal/Installation* on page 15).

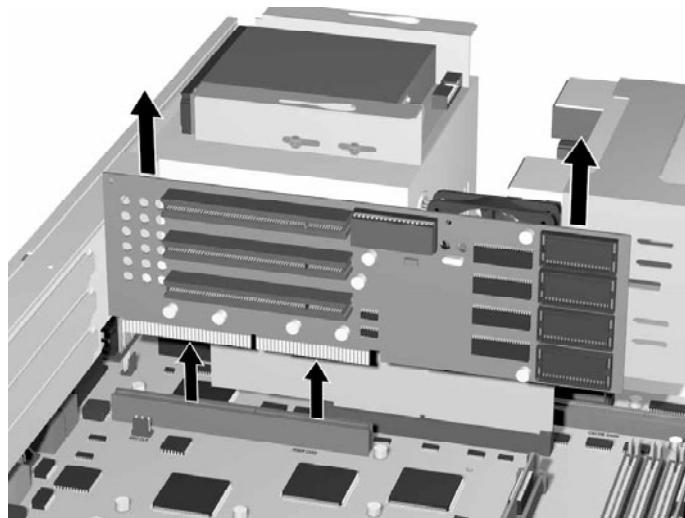


Figure 11:
PCI Riser Card Removal

4. Remove the hex-head screw that secures the support beam to the rear of the chassis.
5. Swing the rear end of beam slightly up and out of chassis. Pull the beam towards rear of machine to remove.
6. Firmly grasp the PCI riser card and pull it straight out of the computer. Sometimes a gentle rocking motion from end to end (*not side to side*) will make it easier to remove the PCI card.

Installing the PCI Riser Card

1. Lower the PCI riser card squarely into the PCI slot so that the notch in the PCI card lines up with the notch in the PCI slot. Slide the contacts straight into the PCI slot and make sure the contacts are firmly seated. When properly seated, the contacts on the bottom should not be visible.

2. Replace the support beam. First, fit the forward end of the stabilizer bar into the two small cut-outs in the front panel of the metal case. Then, swing the bar down, aligning it with the riser card and the processor card. Replace the screw that attaches the beam to the back panel.
3. Reset the CUDA (refer to **CUDA Reset** on page 4).
4. Install the chassis cover (refer to **Chassis Cover Removal/Installation** on page 6).



3.5-inch Drive Removal/Installation

Removing the 3.5-inch Drive

1. Remove the chassis cover (refer to *Chassis Cover Removal/Installation* on page 6).
2. Remove the single screw that secures the drive cage to the back wall of the chassis. The cage will swing up and out away from the computer.

Note: Be careful of the wires for the drive that are still connected.

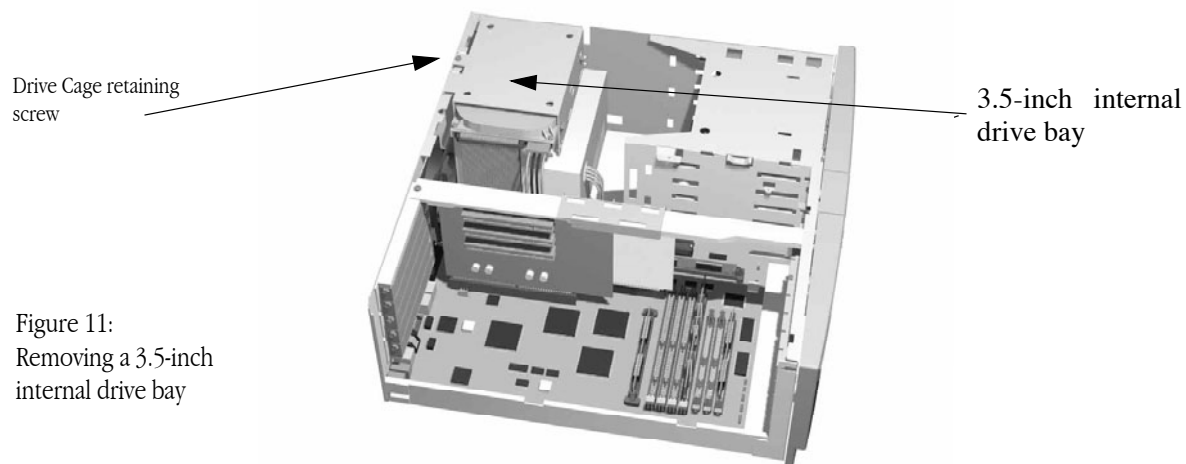


Figure 11:
Removing a 3.5-inch
internal drive bay

3. Disconnect the power cable and SCSI ribbon cable from any installed drives in the cage and rotate the drive cage up and out of the chassis.
4. Remove the four mounting screws that secure the drive to the cage and slide the drive out.

Installing the 3.5-inch Drive

1. Slide the drive into the drive cage and line up the drive with the holes on the drive cage.
2. Replace the four screws that secure the drive to the drive cage.
3. Reconnect the power cable and SCSI ribbon cable for any installed drives in the cage.

4. The drive cage will swing down and into the computer. Replace the screw that secures the drive cage to the back wall of the chassis.
5. Reset the CUDA (refer to **CUDA Reset** on page 4).
6. Install the chassis cover (refer to **Chassis Cover Removal/Installation** on page 6).




5.25-inch Drive Removal/Installation

Removing 5.25-inch Drives

1. Remove the chassis cover (refer to *Chassis Cover Removal/Installation* on page 6).
2. Disconnect all cables that are attached to the device being removed. (see *Figure 12: CDROM Removal* on page 22).

Figure 12: CDROM Removal

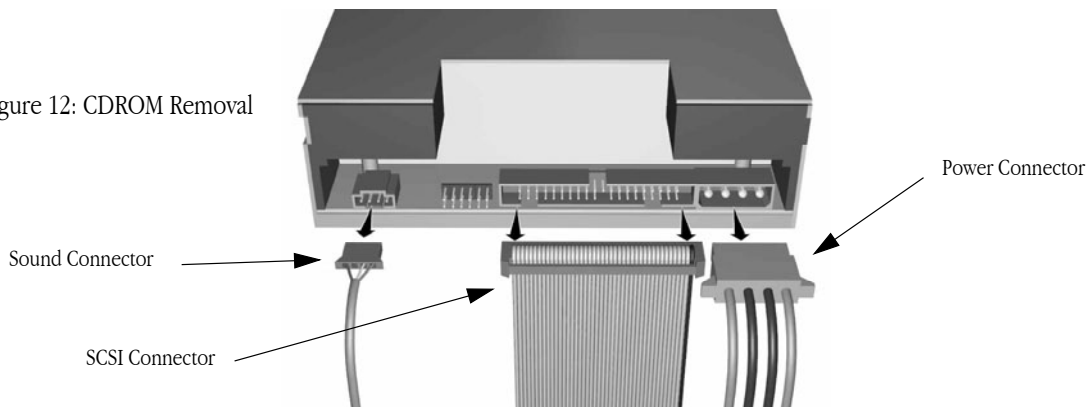


3. Remove the front bezel (refer to *Front Bezel Removal/Installation* on page 8).
4. Push in the tabs of the side rails and slide the drive forward out of the chassis.

Installing 5.25-inch Drives

1. Slide the drive half way into the front bay location, making sure the cable connections are facing the rear of the computer. Pushing the drive in only halfway makes cable connection easier by giving more maneuvering room behind the drive.
2. Connect the cables to the drive. Slide the drive in the rest of the way, making sure that the drive is flush with the front of the computer and the side rails snap into place.

Figure 13: Drive removal

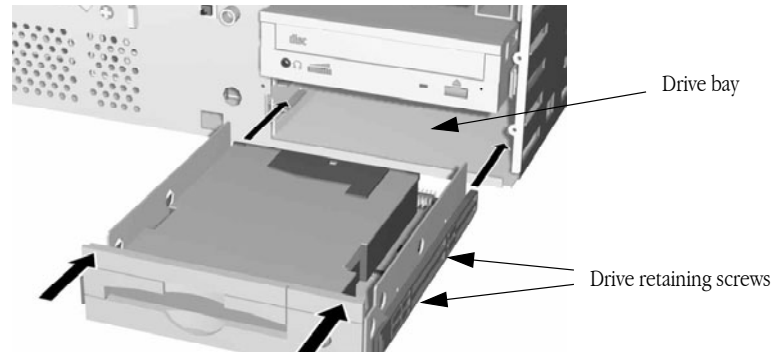

3. Reset the CUDA (refer to **CUDA Reset** on page 4).
4. Install the chassis cover (refer to **Chassis Cover Removal/Installation** on page 6).



Floppy Disk Drive Removal/Installation

Removing the Floppy Disk Drive

5. Remove the front bezel (refer to *Front Bezel Removal/Installation* on page 8).
6. Place the computer on its side with the MLB on the bottom and the open side facing up.
7. Unscrew the two screws on the front of the computer located on either side of the floppy disk drive faceplate. Pull the entire floppy disk drive bay toward the rear of the computer until it disengages. Disconnect the components located in the floppy disk drive bay and lay them aside. (see *Figure 10: Front bay installation* on page 24).
8. Once removed from the slides, angle the bay out of the machine.
9. Remove the four screws, located in pairs, on the either side of the drive.
10. Slide the drive out of the bay.

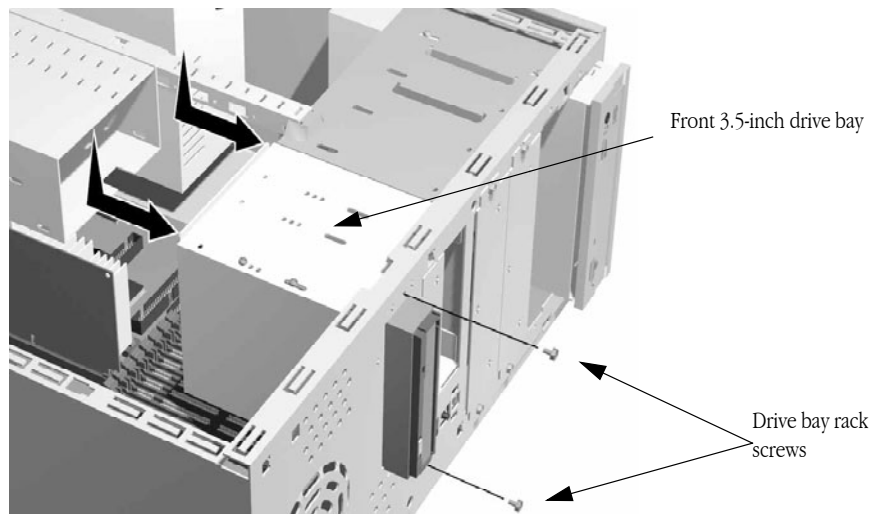


Figure 10: Front bay installation

Installing the Floppy Disk Drive

1. Slide the drive into the bay and align the holes in the drive with the holes in the bay.
2. Insert two screws on each side of the bay to secure the drive to the bay. The floppy disk drive should protrude about 1.5-inches past the front of the chassis in order to be flush against the front bezel when it is installed.
3. Slide the bay in at a 45° angle making sure that the floppy disk drive is properly aligned with the opening on the front of the chassis. Once the floppy disk drive is aligned, push the bay toward the top of the 5.25-inch drive bay.

With the floppy disk drive bay resting against the 5.25-inch bay, push the floppy disk drive bay toward the front of the computer until it has fully engaged the slide brackets. There are two slides located on either side of the 5.25-inch bay. All of these should be firmly seated when the 3.5-inch bay is installed properly. (see **Figure 12: CDRom Removal** on page 22).

4. Secure the bay with the screws on either side of the floppy disk drive.
5. Connect all cables for the drives located within the drive bay.
6. Reset the CUDA (refer to **CUDA Reset** on page 4).
7. Install the front bezel (refer to **Front Bezel Removal/Installation** on page 8).
8. Install the side panel (refer to **Chassis Cover Removal/Installation** on page 6).



Removal/Installation of MLB

Removing the MLB (Main Logic Board)

1. Remove the chassis cover (refer to *Chassis Cover Removal/Installation* on page 6).
2. Remove the CPU card (refer to *Removing the CPU* on page 12).
3. Remove the cache card (refer to *Removing the Cache* on page 14).
4. Remove the PCI card(s) (refer to *Removing PCI Cards* on page 15).
5. Remove the PCI Riser card (refer to *PCI Riser Card Removal/Installation* on page 18).
6. Remove the RAM (refer to *RAM Removal/Installation* on page 10).
7. Disconnect the cables attached to the MLB. Disconnect the power cable by pressing the retaining clip facing the front of the computer, then pulling straight up. Disconnect all other cables by pulling them straight up from their sockets.
8. Remove the eight screws that secure the logic board to the chassis.
9. Slide the MLB out the bottom of the chassis.

Installing the MLB

1. Slide the MLB into the chassis from the bottom. Lay the board flat and align the mounting holes with the posts.
2. Replace the eight screws that secure the MLB to the chassis.
3. Reconnect the cables attached to the MLB. Connect the power cable by pressing the retaining clip facing the front of the computer, then pressing down. Connect all remaining cables to their connectors.

Note: If the cable does not have a directional connector, then connect it with the label on the cable connector facing the rear of the computer.

4. Install the RAM (refer to *RAM Removal/Installation* on page 10).
5. Install the PCI Riser card (refer to *PCI Riser Card Removal/Installation* on page 18).
6. Install the PCI card(s) (refer to *Installing PCI Cards* on page 15).
7. Install the Cache card (refer to *Installing the Cache* on page 14).
8. Install the CPU (refer to *Installing the CPU* on page 12).
9. Reset the CUDA (refer to *CUDA Reset* on page 4).
10. Install the chassis cover. (refer to *Chassis Cover Removal/Installation* on page 6).



Removal/Installation of Power Supply

Removing the Power Supply

1. Remove the chassis cover. (refer to *Chassis Cover Removal/Installation* on page 6).
2. Swing the 3.5-inch drive bay out of the way (refer to *3.5-inch Drive Removal/Installation* on page 20).
3. Disconnect the logic board power connector from the MLB. The connectors will have red, white, blue, and black wires coming out of them that lead back to the power supply (refer to *MLB Diagram* on page 5). Disconnect the power cable by pressing in on the retaining clip and pulling straight up.
4. Remove the power connectors from all internal SCSI devices. These connectors are approximately one inch long with translucent white plugs with black, blue, yellow, red, and orange wires which lead back to the power supply.
5. Remove the four chassis retaining screws that hold the power supply in place. These screws are located on the outside rear of the computer, surrounding the power supply cooling fan.
 - the first screw is located above and to the left on the chassis
 - the second screw is located below and to the left on the chassis
 - the third screw is located above and to the right on the chassis
 - the fourth screws located right below the power plug

CAUTION: Do not remove any screws unless you are sure that they are chassis retaining screws. There are retaining screws that hold the power supply components together as well. These screws must not be removed.

6. Pull the power supply directly up and out of the chassis.

Installing Power Supply

1. Slide the power supply into place, making sure that it is seated properly.
2. Secure the power supply with the four retaining screws on the back of the chassis.

- the first screw is located above and to the left on the chassis
 - the second screw is located below and to the left on the chassis
 - the third screw is located above and to the right on the chassis
 - the fourth screw is located right below the power plug
3. Connect the power connectors to all internal SCSI devices.
 4. Connect the logic board power connector to the MLB.
 5. Move the 3.5-inch drive cage back into position (refer to **3.5-inch Drive Removal/Installation** on page 20).
 6. Reset the CUDA. (refer to **CUDA Reset** on page 4).
 7. Install the chassis cover (refer to **Chassis Cover Removal/Installation** on page 6).

This module was written and designed by:
Michael Scott Clay.

Additional contributions by:
Shane Nestle
Jeff Pryor

Edited by
Mark Wood
Laurie Veatch

This Power Computing module was written, edited and produced on a desktop publishing system using Power Computing system that use the Mac OS.

Every effort has been made to ensure that the information in the module is accurate. Power Computing is not responsible for printing or clerical errors.

Mention of third-party products is for informational purposes only and constitutes neither an endorsement nor a recommendation. Power Computing no responsibility with regard to the performance or use of these products.



© 1997 Power Computing Corporation

Power Computing Corporation
2400 S. IH-35
Round Rock, Texas 78681-7903